



## REPUBLIC OF MOLDOVA

Phone: +373 22 50 28 10

Fax: +373 22 50 28 13

AFS: LUKKYOYX

Email: aim@moldatsa.md

URL: aim.moldatsa.md

### AERONAUTICAL INFORMATION MANAGEMENT

Intreprinderea de Stat  
Pentru Utilizarea Spatiului Aerian  
si Deservirea Traficului Aerian  
"MOLDATSA", Bd. Dacia 80/4  
MD-2026 CHISINAU

**AIP SUP: 006/2023**

**Effective Date: 06-Apr-2023**

**End Date: 03-Jun-2023**

## FIR CHISINAU TEMPORARY AIRSPACE USE CONDITIONS

BASED ON AIRSPACE USE CONDITIONS THE FIR CHISINAU IS TEMPORARY CONFIGURED AS BELOW (SEE APPENDIX):

### WEST PART WITH FOLLOWING LIMITS:

#### HORIZONTAL LIMITS:

481439N 0264935E - 481839N 0274319E - 475250N 0284929E - 472351N 0285959E - 470714N 0291023E - 463810N 0293434E - 463506N 0285540E - 453849N 0281026E - 452824N 0281218E - along border MOLDOVA - ROMANIA.

**VERTICAL LIMITS:** FL660 / GND.

This part of the airspace will be used subject to the following conditions:

1. Flights of civil aircraft from and to aerodromes located in this part of the airspace shall be conducted in accordance with the applicable published standard flight procedures, based on the current airspace configuration.
2. Non-available instrument flight procedures and standard arrival/departure for LUKK aerodrome are listed below.
3. The allocation and activation of temporary reserved areas published in AIP are subject of Airspace Management Cell's decisions and procedures.
4. Flights of general aviation aircraft shall be performed only after acceptance of the Flight Plans (FPL) by the Air Traffic Management Service of S.E. MOLDATSA. In this respect, it is mandatory to submit flight plans to [fmp@moldatsa.md](mailto:fmp@moldatsa.md) at least 60 minutes before the scheduled time for the start of the flight. The flight plan must indicate the purpose of the flight.
5. The flights of UAV/UAS shall be performed in accordance with the Order on establishing the conditions for conducting air operations with UAV/UAS in the airspace of the Republic of Moldova no. 31 / GEN of 28.07.2020.

**For aerodrome LUKK:**

A. Standard Instrument Arrivals (STAR)

The following STAR for LUKK RWY 08/09 are available:

- LIPTA2A;
- BUSES5A;
- UNIRA6A;
- ERADA2D.

The following STAR for LUKK RWY 26/27 are available:

- ERADA2G;
- UNIRA8E;
- BUSES7E;
- LIPTA2E.

B. Instrumental Approach Procedures (IAP)

Expect only radar vectoring for the following instrumental approach procedures:

- LUKK RWY 26: RNP from LUSAV;
- LUKK RWY 27: RNP from LUSAV.

C. Standard Instrument Departures (SID)

The following SID are available:

- LUKK RWY 08: LOBRO2K, LIPTA3K, POGAV6K, NUNTA2K, UNIRA8K, ERADA2M, NETED1K;
- LUKK RWY 09: LOBRO2S, LIPTA2S, POGAV2S, NUNTA2S, UNIRA2S, ERADA2S, NETED1S;
- LUKK RWY 26: LOBRO2P, LIPTA2P, POGAV6P, NUNTA2P, UNIRA6P, ERADA2T;
- LUKK RWY 27: LOBRO2V, LIPTA2V, POGAV2V, NUNTA2V, UNIRA2V, ERADA2V.

**EAST PART – RESTRICTED ‘LUR TEMP03’, WITH FOLLOWING LIMITS:**

**HORIZONTAL LIMITS:**

481502N 0263725E - along border MOLDOVA - UKRAINE - 452824N 0281218E - along border MOLDOVA - ROMANIA - 453849N 0281026E - 463506N 0285540E - 463810N 0293434E - 470714N 0291023E - 472351N 0285959E - 475250N 0284929E - 481839N 0274319E - 481439N 0264935E - along border MOLDOVA - ROMANIA - 481502N 0263725E.

**VERTICAL LIMITS: FL660 / GND.**

As a rule, transit flights and flights to and from aerodromes are not allowed in this part of airspace.


However, by applying the exceptions provided in p.25 of Disposition no.1 of the National Commission on Exceptional Situation of 24.02.2022, in the restricted part of the airspace, may be permitted following types of flights:

- a. repositioning ferry flights of civil aircraft of national and foreign air operators,
- b. commercial air transport cargo flights of national and foreign air operators,
- c. humanitarian, repatriation and emergency medical flights,
- d. other categories of flights, justified and limited to the state of emergency.

Application for the approval of flight in the restricted part shall be submitted to CAA [dri@caa.gov.md](mailto:dri@caa.gov.md), 7 working days in advance to the date of planned flight.

The initiation of a flight that was issued with permission, as stated above, shall be done only after the acceptance of the Flight Plan by the Air Traffic Management Service (ATM) within S.E. MOLDATSA. In this respect, it is mandatory to submit flight plans to [fmp@moldatsa.md](mailto:fmp@moldatsa.md) at least 180 minutes before the planned time of departure.

APPENDIX - FIR CHISINAU TEMPORARY AIRSPACE USE CONDITIONS

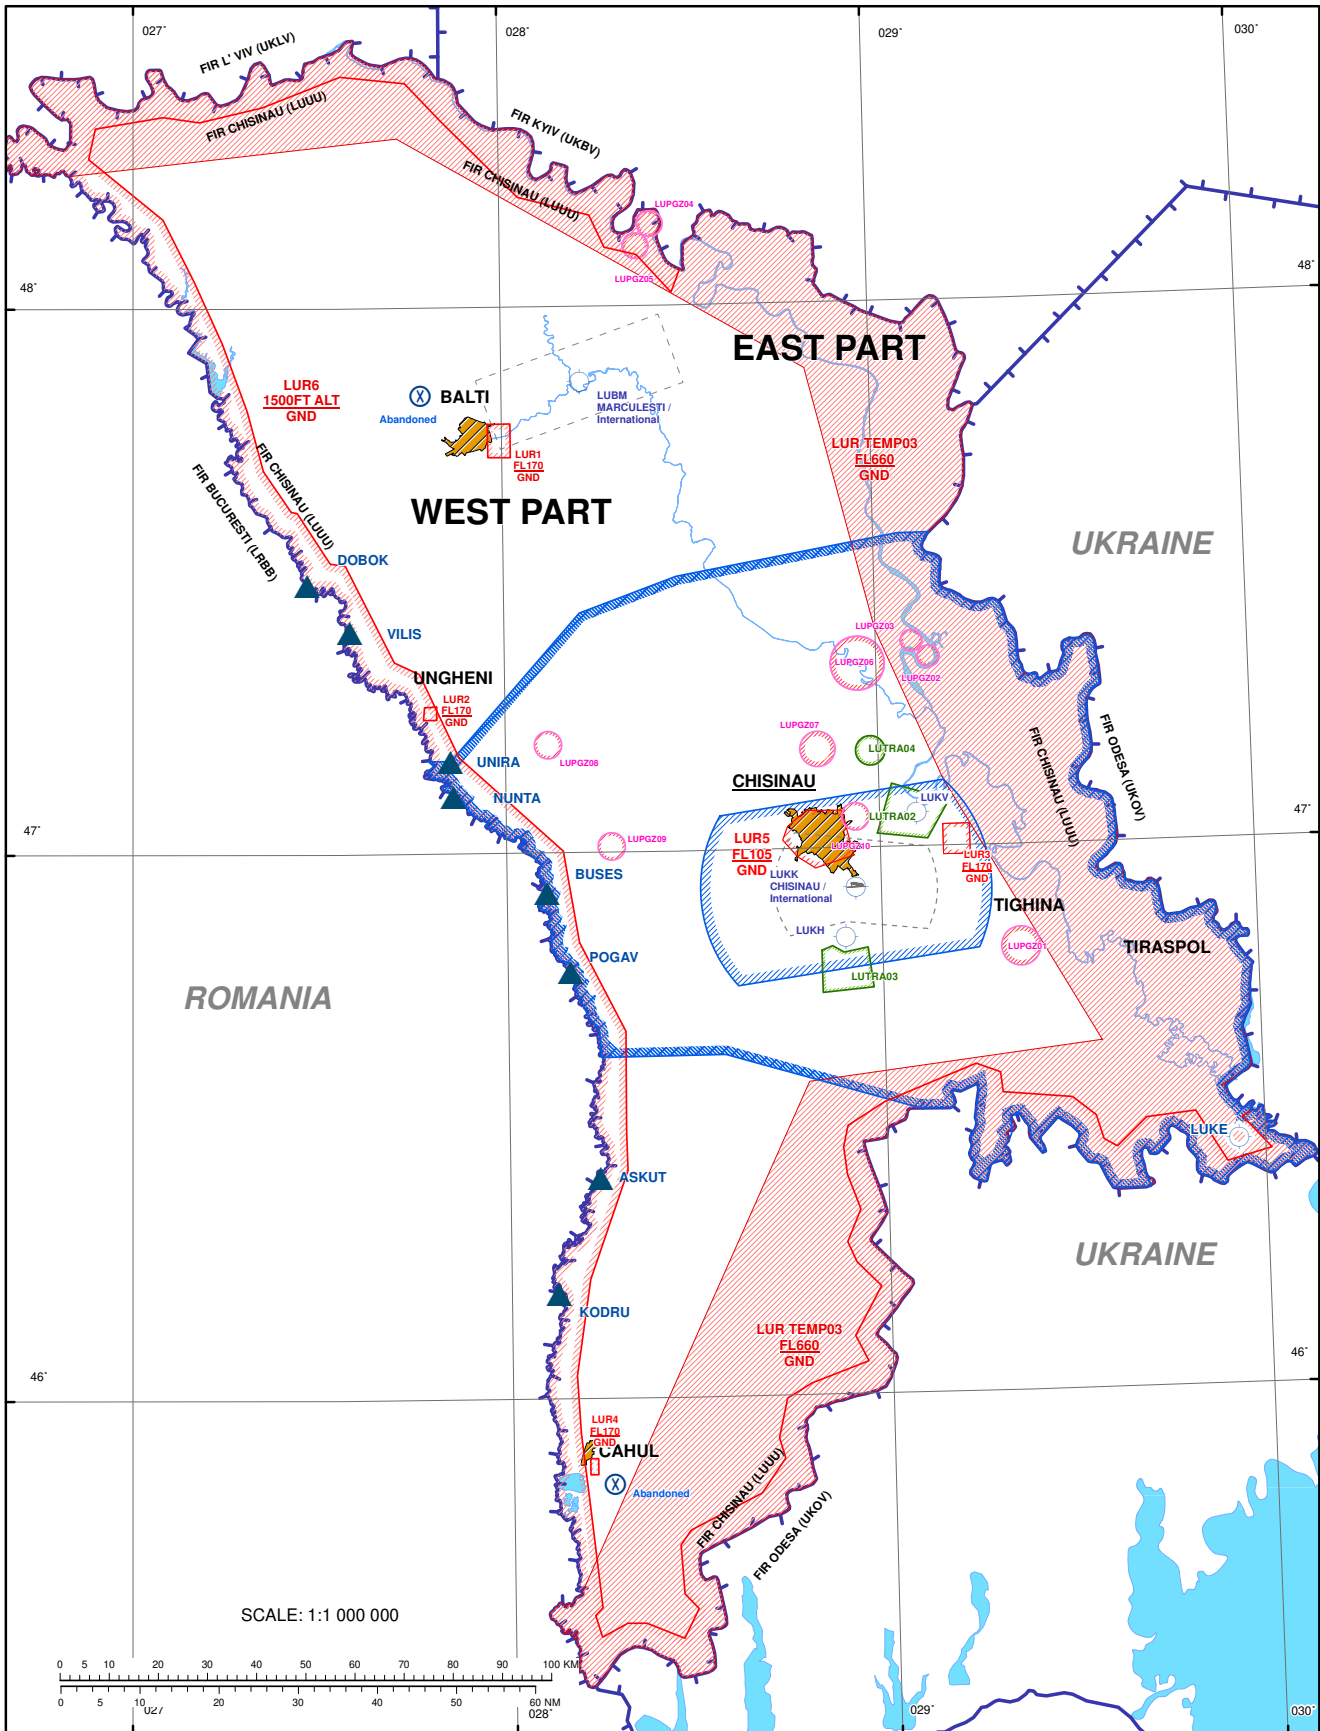

- END -